

# Folding Portable Toilet Model FPT 300

**Dimensions of the Model FPT 300 41" (1.04m) x 41" (1.04m) x 84" (2.13m)**

Ships Completely Assembled in a Folded Position

Deploys and Refolds in Less Than 3 Minutes

Ships 140 to a 53' Semi Trailer or Stores and Ships 100 Fully Assembled in a 40' Shipping Container

Molded Toilet Seat Eliminates Need to Replace Toilet Seat

Standard Flip Top Tank Assembly Allows for Complete Cleaning of the Holding Tank and Under the Seat


65 Gallon Holding Tank That Fits Through the Door **(Picture 5a, pg 4)**

Two People Can Cost Efficiently Stack and Ship 24 Model FPT 300 Toilets Per Hour

## Cost Efficient Loading & Shipping Options



12 Complete Model FPT 300 Ready to Ship

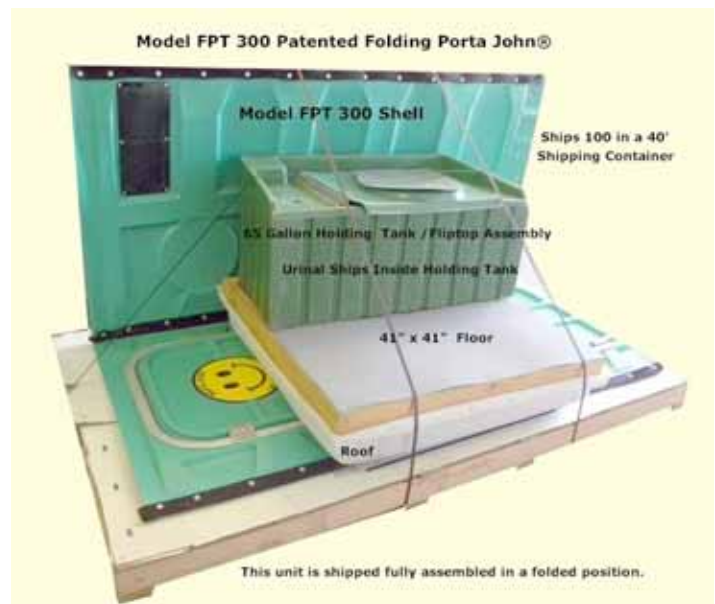

Single Model FPT 300 Ready to Ship



**Model FPT 300**  
Dimensions

42" x 42" x 84"  
195 Pounds

One Year Limited  
Parts & Labor  
Warranty



The Model FPT 300 was the Exclusive Toilet Selected for the  
1996 Olympic Games in Atlanta, Georgia

## Porta John® Patented Folding Portable Toilet

Patents Issued and Pending

The Model FPT 300 is shipped from the factory 100% assembled and shipped in a folded position 100 to a 40 foot container. When deployed the unit can be set up for use in the field in less than 3 minutes.

Holding Tank Fits Through The Door

**Tank fits out the door - flip top for complete tank cleaning  
and inspection for unauthorized refuse**



# Porta John® Patented Folding Portable Toilet Assembly Instructions

## Porta John® Model FPT 300



Picture 1

Picture of Components (Urinal & Bolts Inside Tank)

Shell – Tank - Floor - Roof

Place Outer Shell on Ground



Picture 2



Picture 3

Stand Outer Shell Up and Square Off  
By Pulling on the Door or Corner



Picture 3a



Picture 3b



Picture 3c

Walk Around and Square up Unit  
By Pulling on Corners

Insert Floor Through the Outer Shell Door



Picture 4



Picture 4a

[www.EmergencyToilet.com](http://www.EmergencyToilet.com)

Toll-Free Phone: 800-521-6310 Fax: 001-586-731-0670

International Phone: 001-586-739-4611

E-Mail: [info@emergencytoilet.com](mailto:info@emergencytoilet.com) Web Page: <http://www.EmergencyToilet.com>

**Porta John® Patented Folding Portable Toilet**  
**Assembly Instructions**  
Patents Issued and Pending



Picture 5



Picture 5a

Place waste Holding Tank in Unit Through Outer Shell Door

Unit Sump Will Fit Snug in The Rear Section of the Floor

Remove the Urinal from the Holding Tank. Place the Urinal under the two flaps on the wall and snap the urinal spout in the small hole on the top of the holding tank.

Place Roof on the top of outer shell and fasten with a bolt and wing nut on each side.




Picture 6



Picture 6a



Picture 6b

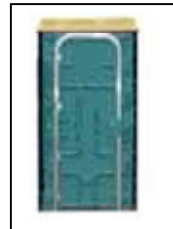

Picture 6c

To store the unit for future deployment, reverse the entire process. Fifty (50) of the Porta John® patented portable toilets can be stored in a 20' x 8' foot container.



<http://toilets.com/products/portajohn.htm>

12 Completely Assembled Patented Folding Portable Toilets Model FPT 300 Shipped in a Folded Position.

Each FPT 300 can be deployed in three minutes.



**Small Storage Footprint 41" (1.04m) x 41" (1.04m) x 84" (2.13m)**



Holding Tank 65 Gallon Capacity  
Porta John® E-mail: [info@toilets.com](mailto:info@toilets.com)

